



Technical Bulletin 202606

www.jcmglobal.com



Fig. 1: SIIG® USB-to-Serial Adapter
(P/N 302-100004R)

Parts are Parts **SIIG® USB-to-Serial Adapter** **(P/N 302-100004R)**

JCM applications such as the JCM ID-003 and JCM ID-024 Basic Driver and JCM Printer Basic Driver require an RS-232 connection. Many laptop computers do not have the serial communications (RS-232) port required for these applications. The **SIIG USB-to-Serial Adapter** (Fig. 1) supports communication to various JCM applications through the Laptop or PC's USB ports. Use the Laptop's or PC's Device Manager to identify COM and LPT Ports where the SIIG USB-to-Serial Adapter is connected and input that COM port number into the application.